


# Safe-Stop® Trailer TMA

## Instructions for Uncrating TMA

It is important to read these instructions to safely uncrate this TMA.


1. Cut the main straps on each side of the control box that holds the unit to the pallet. Then remove the large wooden crate from under the frame as well as the wheels. DO NOT CUT ANY MORE STRAPS! The remaining straps will be cut after the unit is in the horizontal position.

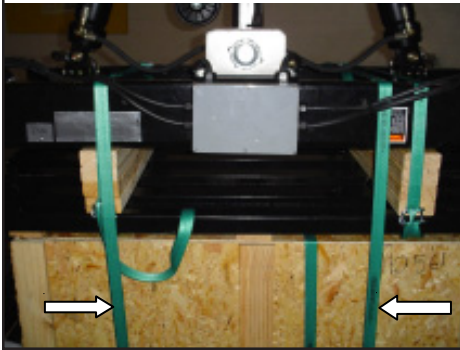


2. Put strap around center of frame to lower to horizontal position.

### **WARNING!**


Do not put strap around cylinders!

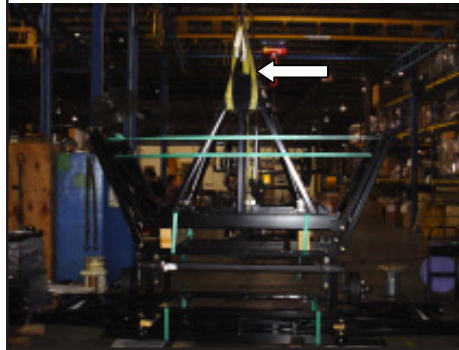

3. Shipping weight is about 1300 lbs. Use crane or forklift of adequate size to begin lowering the TMA to the horizontal position.

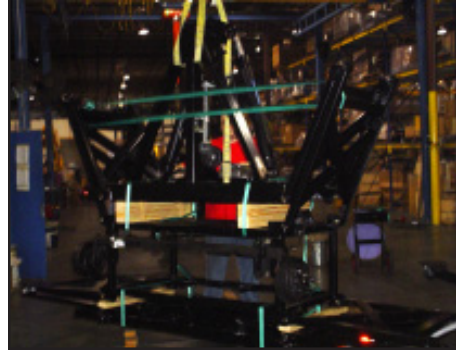


4. Protect hub by putting 2x4's to the height of 10 inches under the axle as shown below.

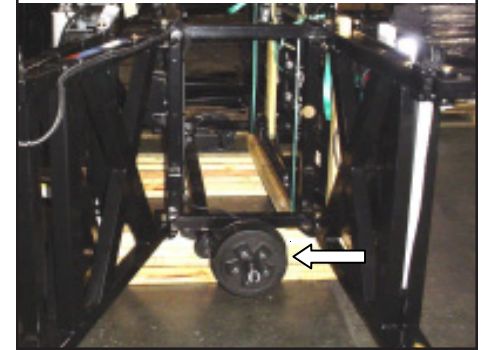

5. While still connected to crane and resting on 2x4's, lower jack and cut straps to rear section. Install wheels.



6. Once the jack is on the ground surface, axles are braced, and wheels have been installed, you may cut the remaining straps and stretch the TMA out.

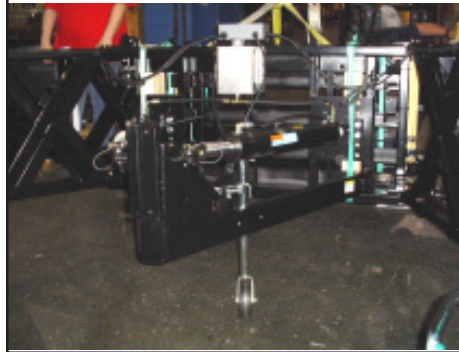

7. Extend the Support Frame. Slowly and evenly pull the frame out to its full extent.

### **WARNING!**

Even when supported by forklift, frame can be unwieldy. Use extreme care.

### **WARNING!**

Until the cables are installed, the System may shift to one side.

8. See the installation manual that shipped with the TMA to continue setup.

